



**NOTE:**  
 RELAY IS PERMANENTLY POWERED FROM THE IGNITION SWITCH ONCE SWITCH IS TURNED TO POSITION 1  
 USE THE EXISTING WIRING LOOM STUB FOR THE HEATER AND EXTRACT THE LOW SPEED AND EARTH WIRES FROM IT  
 USE THE STUB TO SUPPLY THE TRIGGER LINE AND EARTH TO THE RELAY COIL

ONCE WIRED OPERATING THE HEATER SWITCH ON AND THEN OFF AGAIN WILL TRIGGER THE RELAY TO START  
 10 MINUTES AFTER THE TRIGGER HAS BEEN RELEASED THE RELAY AUTOMATICALLY POWERS OFF.  
 THE WARNING LAMP IS ESSENTIAL SO YOU KNOW WHEN THE RELAY IS OPERATING!

<b>TIGER CAT E1 WIPER &amp; HEATER</b>		DRAWN BY GILES COOPER DATE 23/09/2006 REVISION 3 PAGE 5
--	--	--